

# DCS 6000



*Feature License Manual*

**Digital Conference System**

## **DCS 6000 Digital Conference System Feature License Key Manual**



# List of Contents

<b>List of Contents.....</b>	<b>3</b>	<b>Before you start.....</b>	<b>4</b>
<b>Introduction .....</b>	<b>4</b>	<b>How to import the License key .....</b>	<b>4</b>
<b>Working with Feature License Key .....</b>	<b>4</b>	<b>View CU License Status .....</b>	<b>7</b>
<b>License key.....</b>	<b>4</b>		

## Introduction

This manual describes the procedure for importing Feature License Key to the CU 60XX Central Unit.

## Working with Feature License Key

### License key

The CU 60XX Central Unit will as standard only have basic functionality. By obtaining further licenses, the functionality can be expanded to include further functionality like:

- More Conference Units
- More Interpreter Channels
- Voting option
- Voice Activation
- Secure audio transmission
- 3 part voting control using RS232 port on CU 60XX

The file with the License key is delivered as a zipped file from your authorised DIS Distributor or Dealer.

### Before you start


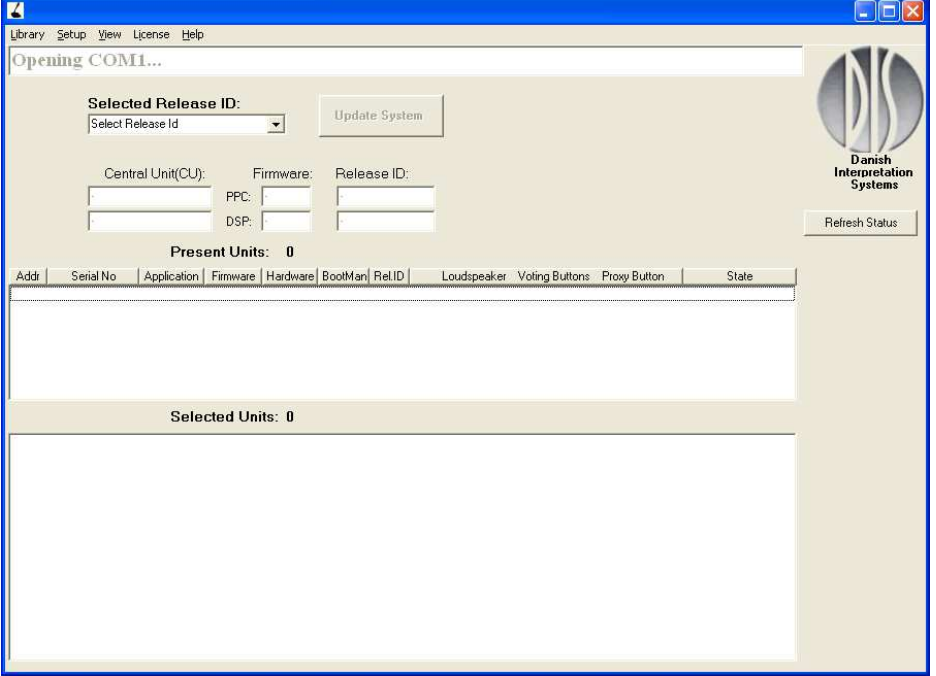


Needed equipment is a PC or laptop with a free RS232 port and a serial cable (straight) and the DCS 6000 Firmware Upgrade Utility (FUU).

The DCS 6000 Firmware Upgrade Utility (FUU) will be found on the Product CD following the CU 60XX. The utility can also be acquired at an authorised DIS Distributor or Dealer.


If your laptop does not have an RS232 port a RS232/USB adapter can be used instead. However please note, that the RS232 communication to the CU 60XX requires hardware handshaking.

### How to import the License key

1	Unzip the zip file containing the Licence Key to the Desktop or another convenient place at the PC or Desktop	
2	Connect the laptop to the CU 60XX using the RS 232 serial interface cable and switch ON the CU 60XX	


3	<p>Start DCS 6000 Firmware Upgrade Utility (FUU) by clicking the Icon.</p>	 <p>DCS6000 Firmware Upgrade Utility.exe</p>
4	<p>The Utility starts</p>	
5	<p>After the utility is started, you may be notified the 'FUU_Library.XML' is missing.</p> <p>This library is <u>not needed</u> for importing a License key.</p> <p>Click OK</p>	
6	<p>Check the Com setting by clicking Setup/Serial Port.</p> <p>Select the COM port in Use and click OK</p>	

7 The FUU will now show all units in the system as well as the information of the Central Unit.  
The S/N of the Central Units is also shown.

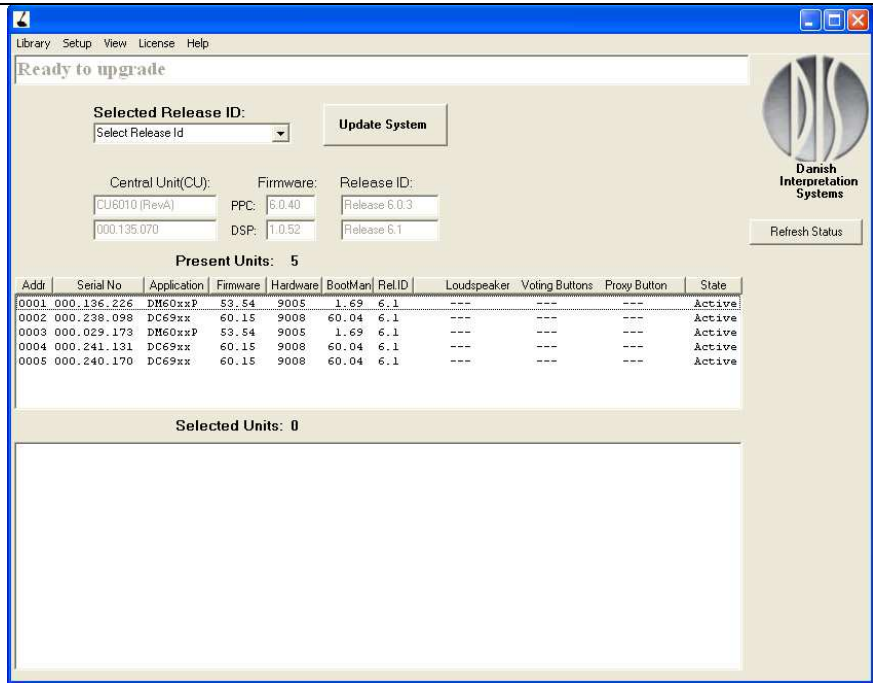

8 Click 'License' and select 'Import new CU License key'

9 The popup 'Import License key' will now show.  
Use the browse button to select the License Key file  
Press OK.  
The new license key will then be imported.  
After successfully having imported the license key, you may be notified to restart the CU 60xx.  
**Note:**  
The information fields will show the functionality included in the license key

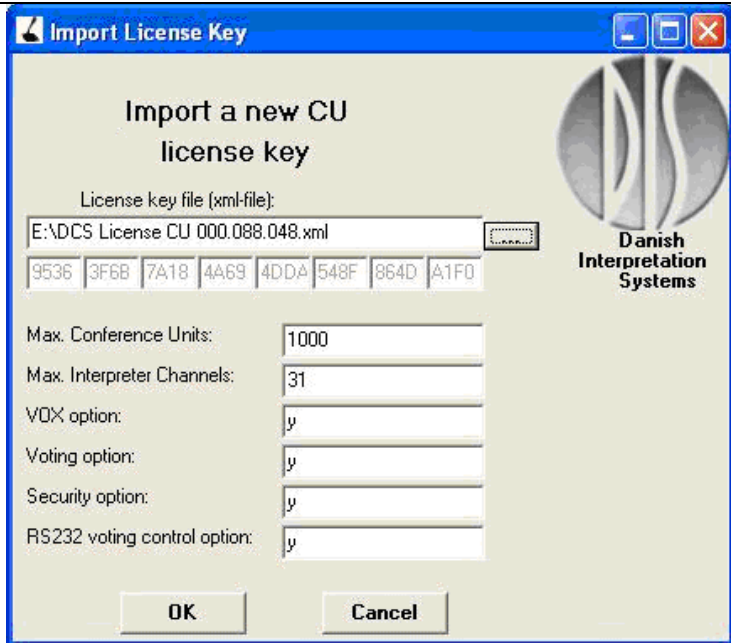

### View CU License Status

1 Click 'License' and select 'View CU License Status'

